


CLIGHTING LEAF RF-WSR-CCT/T-BTR-WH RF Wireless CCT Tunable Remote Pair to Controller RF-WIFI-CNTRL-5CH-4A


Important: Read All Instructions Prior to Installation

Function introduction

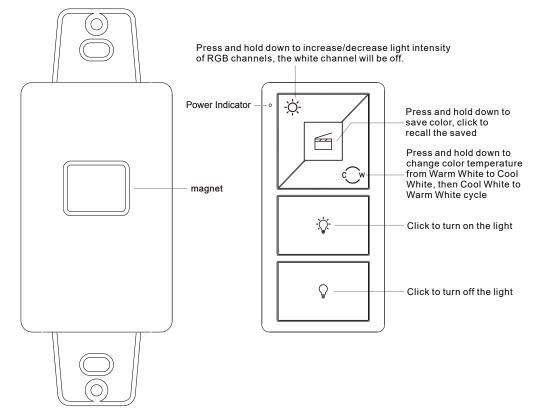

Bracket

Front side

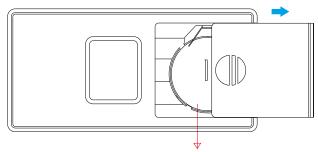

Note: Before the first use, please remove the protective film on the battery.

C € ØRoHS

Product Data

Output	RF signal
Operation Frequency	916.5MHz
Power Supply	3V(CR2032 battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	66x32.5x8.9mm

· Set controller to CCT Tunable mode


- · Controller can be paired with up to 8 different remotes
- · Waterproof grade: IP20

Safety & Warnings

• This device contains a button lithium battery that shall be stored and disposed properly.

• DO NOT expose the device to moisture.

Pair with RF controller

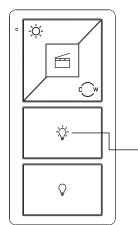


Step 1: Connect RF controller according to it's instructions and wiring diagram. Power on RF controller. (RF-WIFI-CNTRL-5CH-4A)



Step 2: Click the "PROG" button on RF controller or re-power the controller on/off three times continuously to set it into pairing mode.

Step 3:Click any button on the remote (e.g. button $\dot{\nabla}$), LED lights connected to the RF controller will flicker once indicating the receiver is paired with the remote.

Installation

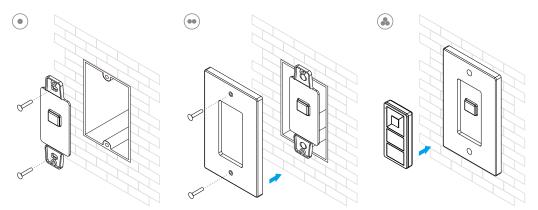

Back side